

## DOMe CLEANER ASSY: Installing Cleaning Head on Threaded Extension Pole

- 1) Mate Extension Pole & Cleaning Head ACME threads as shown below & tighten firmly in clockwise direction. (Note “clear hole” alignment of through holes on base of blue threaded & mated Assy).
- 2) Locate Brass cotter pin included in kit, and install into the “clear hole” drilled through the Assy.



- 3) Push in cotter pin legs ends first, all the way through mated Dome Cleaner head.
- 4) Push rounded head of cotter pin fully down and use index finger to hold in place, then flip Assy to bend the legs side of the cotter pin that is now sticking out from far end, all the way through the blue threaded cup base.
- 5) Use a flat bladed screwdriver, or similar tool to spread cotter pin legs & create 90-degree bends on each leg.



- 6) Press down both bent legs firmly to securely detail & set cotter pin firmly in place.

