


Dotworkz COOLDOME series: Understanding & Trouble Shooting your Cooler

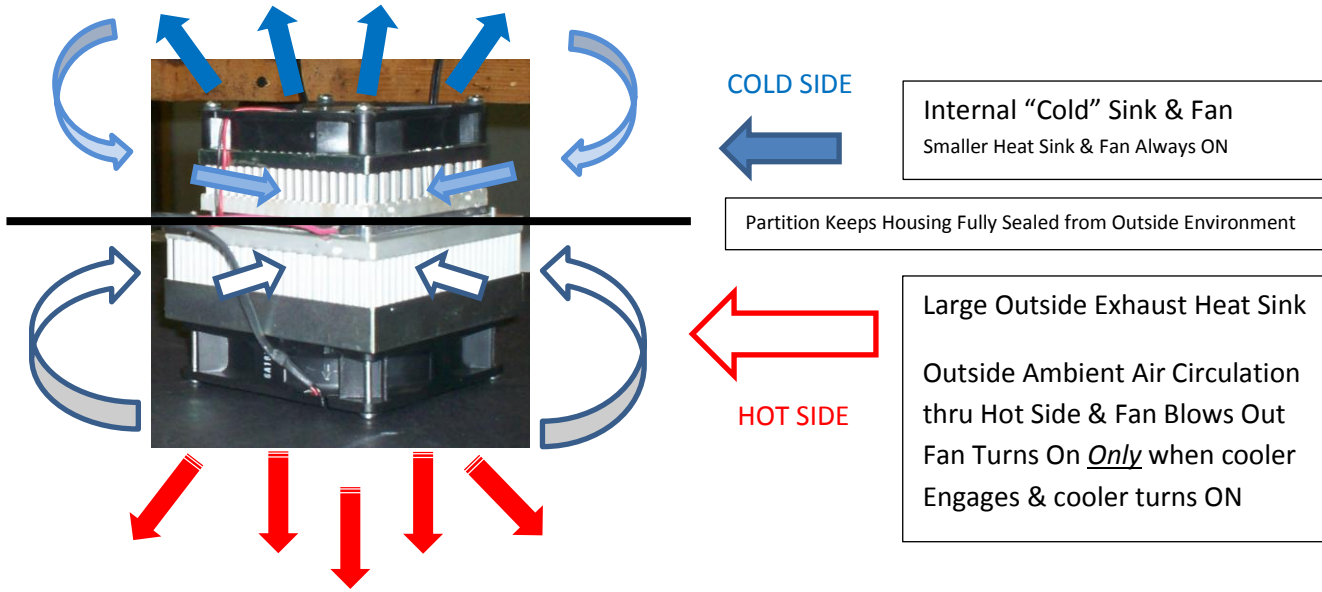

Performance Specifications:

- **Internal Fan is Always ON** when power is connected
- External Fan & Active Cooling is thermostatically controlled
- When Thermostat Engages, **External Fan & Active Cooling turns on** at same time
- Thermostat is Fixed Disc Thermostat: ON @ 100°F, resets OFF @ 70°F
- Disc Thermostat will "click" when turned ON or OFF (opens & closes contacts)
- Use solder iron placed on face of disc thermostat (10-20 seconds) to force cooler ON
- Spray compressed CO₂ on disc thermostat to cool & turn OFF cooler. A can of compressed CO₂ to clean electronics can be purchased nearly anywhere computers & accessories are sold.

Version 2, with on-circuit relay mount

