



COOLDOME Thermostat Bypass for custom Thermostats or PID Control

Only operate cooler with internal & external fans properly installed & operating
For Dotworkz PCB Ver. 0311cd or later revisions

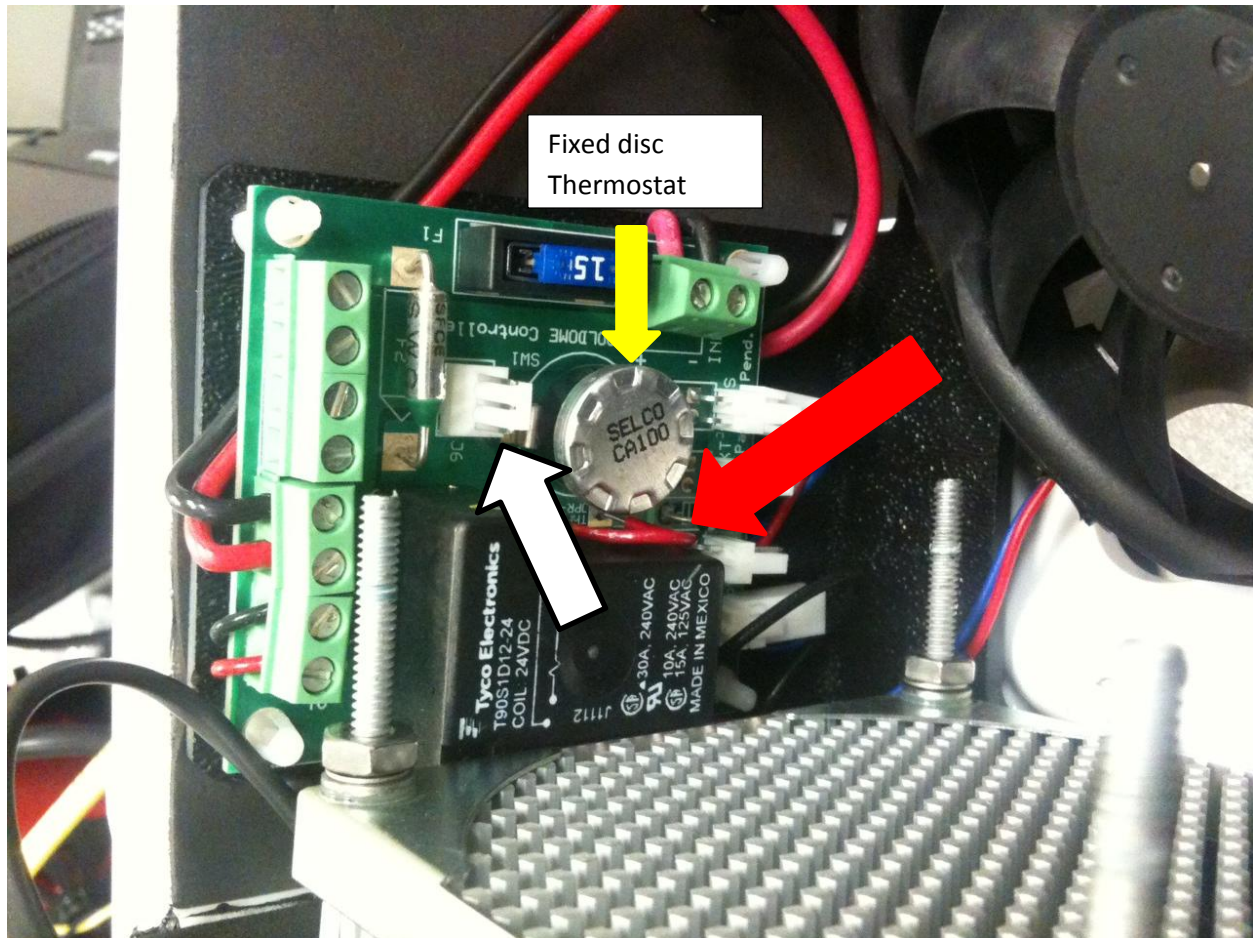

Red Jumper / Thermostat Bypass Wire
– Cut to Bypass PCB Thermostat



J6: Use dry contacts to control Relay

Pin 2: Switched +DC to Relay Coil
Pin 3: +DC source: to Thermostat contacts

J6 mates with 100kk Molex #22-01-3037 plug housing, using 08-50-0114 crimp contacts or equiv.

(Pin 1: Neg. (–) DC (unused))